

Motorcycle and ATV/Motorcycle Lift Adapter Kits Installation and Operation Manual

Manual P/N 5900054 — Manual Revision B — April 2019



*Motorcycle Lift Adapter Kit shown. QuickJack, Ranger RML-1100 Motorcycle Jack, technician, and motorcycle **not** included.*

QuickJack is designed and engineered by BendPak Inc. in Southern California, USA. Made in China.

 **DANGER**

IMPORTANT SAFETY INSTRUCTIONS, SAVE THESE INSTRUCTIONS!

Read the **entire** contents of this manual **before** installing, operating, servicing, or maintaining this lift. Failure to follow the instructions and safety precautions in this manual can result in serious injury or death. Make sure all other operators also read this manual. Keep the manual near the product for future reference. By proceeding with installation and operation, you agree you fully understand the contents of this manual.

Manual. QuickJack Motorcycle and ATV/Motorcycle Adapter Kits, *Installation and Operation Manual*, Manual P/N 5900054, Manual Revision B, Released April 2019.

Copyright. Copyright © 2019 by BendPak Inc. All rights reserved. You may make copies of this document if you agree that: you will give full attribution to BendPak Inc., you will not make changes to the content, you do not gain any rights to this content, and you will not use the copies for commercial purposes.

Trademarks. BendPak and the BendPak logo are registered trademarks of BendPak Inc. QuickJack is a trademark of BendPak Inc. All other company, product, and service names are used for identification only. All trademarks and registered trademarks mentioned in this manual are the property of their respective owners.

Limitations. Every effort has been made to ensure complete and accurate instructions are included in this manual. However, product updates, revisions, and/or changes may have occurred since this manual was published. BendPak reserves the right to change any information in this manual without incurring any obligation for equipment previously or subsequently sold. BendPak is not responsible for typographical errors in this manual.

Warranty. The QuickJack warranty is more than a commitment to you: it is also a commitment to the value of your new product. For full warranty details, visit quickjack.com/warranty. To register your QuickJack, visit quickjack.com/register-quickjack (be sure to click **Submit**).

Safety. Your new product was designed and manufactured with safety in mind. Your safety also depends on proper training and thoughtful operation. Do not set up, operate, maintain, or repair the unit without reading and understanding this manual and the labels on the unit.

Owner Responsibility. In order to maintain your product properly and to ensure operator safety, it is the responsibility of the product owner to read and follow these instructions:

- Follow all setup, operation, and maintenance instructions.
- Make sure product setup conforms to all applicable local, state, and federal codes, rules, and regulations, such as state and federal OSHA regulations and electrical codes.
- Read and follow all safety instructions. Keep them readily available for operators.
- Make sure all operators are trained, know how to safely operate the unit, and are properly supervised.
- Do not operate the product until you are certain that all parts are in place and operating correctly.
- Carefully inspect the product on a regular basis and perform all maintenance as required.
- Service and maintain the unit only with approved replacement parts.
- Keep all instructions permanently with the product and make sure all labels are clean and visible.
- **Only use this product if it can be used safely!**

Table of Contents

Introduction	3	System Components	7
Shipping Information	4	Setup	9
Safety Considerations	4	Operation	10
Specifications	6	Maintenance	11

Introduction

This manual describes the:

- **Motorcycle Lift Adapter Kit.** Holds your motorcycle in place while you service or repair it. Requires a working QuickJack. Not compatible with the BL-6000XLT model.
- **ATV/Motorcycle Lift Adapter Kit.** Holds your ATV or motorcycle in place while you service or repair it. Platform is wider than the Motorcycle Lift Adapter Kit. Requires a working QuickJack. Not compatible with the BL-6000XLT model.

Both Lift Adapter Kits support up to 1,000 lbs (453 kg).

If you want to perform wheel service, consider getting the Ranger RML-1100 Motorcycle Jack; more information is available at quickjack.com/accessories.

More information about the full line of QuickJack products and accessories is available at quickjack.com.

This manual is mandatory reading for all users of the QuickJack Lift Adapter Kits, including anyone who sets up, operates, maintains, or repairs them.

⚠ DANGER Be very careful when setting up, operating, maintaining, or repairing your equipment; failure to do so could result in property damage, product damage, injury, or (in very rare cases) death. Make sure only authorized personnel operate this equipment. All repairs must be performed by an authorized technician. Do not make modifications to the unit; this voids the warranty and increases the chances of injury or property damage. Make sure to read and follow the instructions on the labels on the unit.

Keep this manual on or near the equipment so that anyone who uses or services it can read it.

Technical support for your product is available directly from your distributor or you can contact QuickJack at support.quickjack.com or support@quickjack.com. You can also ask for replacement parts (please have the serial number and model number of your unit available).

Shipping Information

Your equipment was carefully checked before shipping. Nevertheless, you should thoroughly inspect the shipment **before** you sign to acknowledge that you received it.

When you sign the bill of lading, it tells the carrier that the items on the invoice were received in good condition. **Do not sign the bill of lading until after you have inspected the shipment.** If any of the items listed on the bill of lading are missing or are damaged, do not accept the shipment until the carrier makes a notation on the bill of lading that lists the missing and/or damaged goods.

If you discover missing or damaged goods **after** you receive the shipment and have signed the bill of lading, notify the carrier at once and request the carrier to make an inspection. If the carrier will not make an inspection, prepare a signed statement to the effect that you have notified the carrier (on a specific date) and that the carrier has failed to comply with your request.

It is difficult to collect for loss or damage after you have given the carrier a signed bill of lading. If this happens to you, file a claim with the carrier promptly. Support your claim with copies of the bill of lading, freight bill, invoice, and photographs, if available. Our willingness to assist in helping you process your claim does not make us responsible for collection of claims or replacement of lost or damaged materials.

Safety Considerations

Read this manual carefully before using your new product. Do not set up or operate the product until you are familiar with all operating instructions and warnings. Do not allow anyone else to operate the product until they are also familiar with all operating instructions and warnings.

General Safety Information

Please note the following:


- The product is a Motorcycle or ATV/Motorcycle Lift Adapter Kit. Use it only for its intended purpose.
- The Lift Adapter Kit **requires** a working QuickJack. Make sure to follow all QuickJack safety requirements in addition to the safety requirements listed here.
- The product must only be operated by authorized personnel.
- Always wear appropriate protective clothing when using the product.
- Keep loads centered and balanced on the Platform.
- When the product is in use, keep all body parts away from it.
- Do not make any modifications to the product. If you make modifications to the product, you may void your warranty and increase the chances that an accident could occur.
- Make sure all operators read and understand the *Installation and Operation Manual*. Keep the manual near the device at all times.
- Make a visual inspection of the product before using it. Check for damage or missing parts. Do not use the product if you find any of these issues. Instead, take it out of service, then contact an authorized repair facility, your distributor, or QuickJack at support.quickjack.com or support@quickjack.com.


-
- QuickJack recommends making a thorough inspection of the product at least once a year. Replace any damaged or severely worn parts, decals, or warning labels.

Symbols

Following are the symbols used in this manual:

 **DANGER** Calls attention to an immediate hazard that **will** result in injury or death.

 **WARNING** Calls attention to a hazard or unsafe practice that **could** result in injury or death.

 **CAUTION** Calls attention to a hazard or unsafe practice that could result in minor personal injury, product, or property damage.



Tip



Calls attention to information that can help you use your product better.

Liability Information

BendPak assumes **no** liability for damage resulting from:

- Use of the equipment for purposes other than those described in this manual.
- Modifications to the equipment without prior, written permission from BendPak.
- Damage to the equipment from external influences.
- Incorrect operation of the equipment.

Specifications

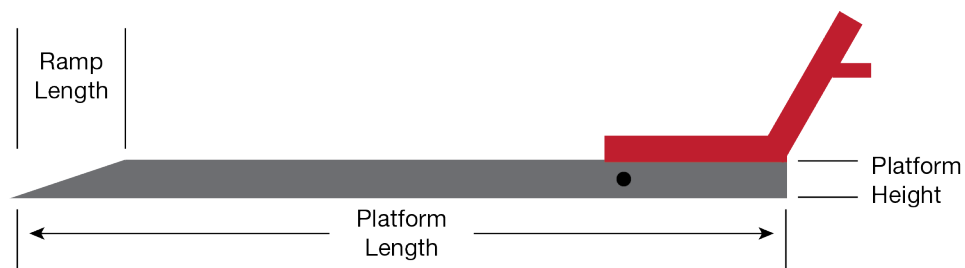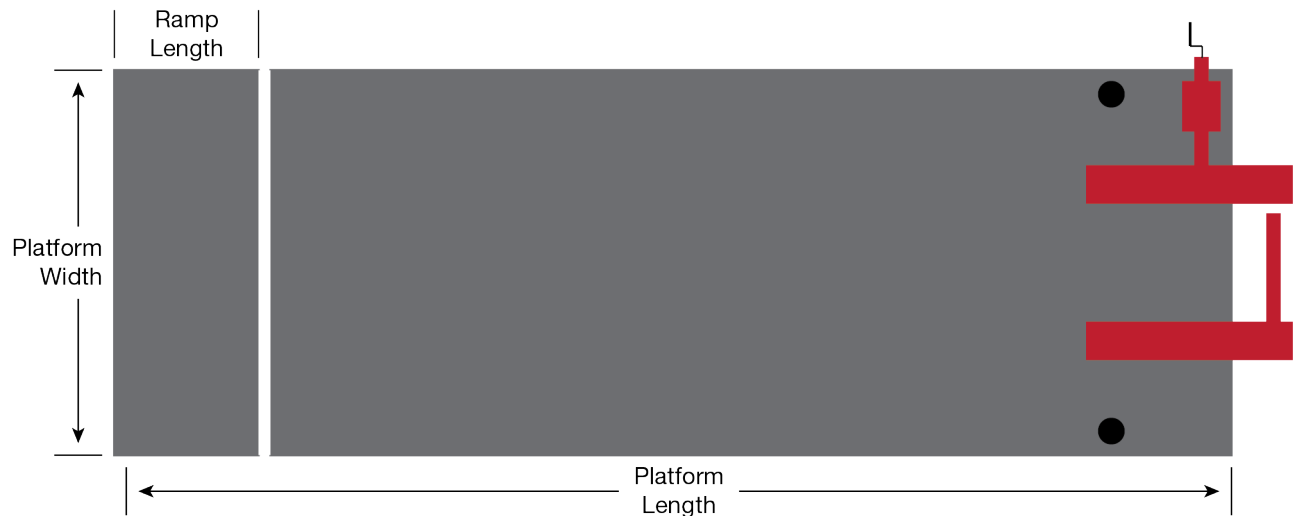

Model	Motorcycle Adapter Kit	ATV/Motorcycle Adapter Kit
Platform width	28.5" / 725 mm	47.25" / 1200 mm
Platform length	88" / 2,236 mm	88" / 2,236 mm
Platform height	3" / 76 mm	3" / 76 mm
Ramp length	6.25" / 159 mm	6.25" / 159 mm
Weight of Platform plus clamp assembly	104 lbs (47 kg)	124 lbs (56.25 kg)
Maximum supported weight	1,000 lbs (453 kg)	1,000 lbs (453 kg)


⚠ WARNING Do not put a vehicle weighing more than 1,000 lbs (453 kg) on the Platform.

Specifications are subject to change without notice.

System Components

System components include the Platform (with Clamp Assembly) and your QuickJack.

The Platform

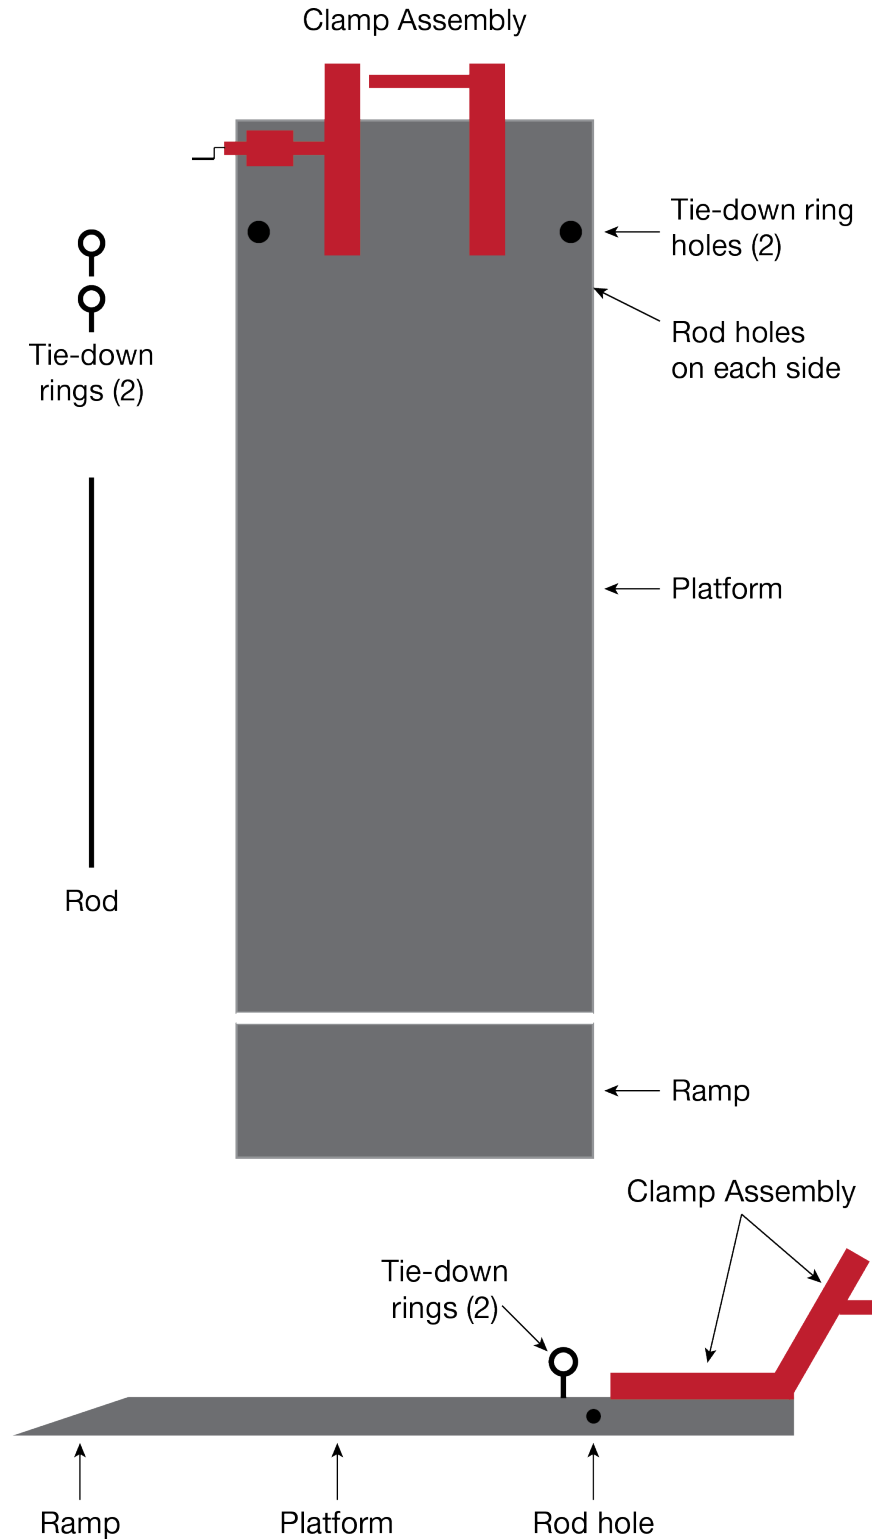

The QuickJack

The Lift Adapter Kit **requires** a QuickJack; the platform sits on top of your QuickJack frames.



Tip

This manual assumes your QuickJack is already set up and working. If it is not, you need to set it up so you can use your Lift Adapter Kit. Refer to the *QuickJack Installation and Operation* manual for more information about setting up and using your QuickJack. The latest version of the QuickJack Setup and Operation Manual can always be found on the QuickJack website: quickjack.com/downloads.html.

The Ranger RML-1100 Motorcycle Jack

The Ranger RML-1100 Motorcycle Jack sits on the Lift Adapter Kit platform and allows you to raise your vehicle even higher, providing additional access for service and repair.



Setup

- ⚠ WARNING** Do not use the Lift Adapter Kit where the slope of the floor is greater than 3 degrees; this makes it much more likely that the load on the platform will become off balance and fall, potentially damaging the platform, the QuickJack, or any people in the vicinity. Make sure to wear appropriate work clothing while setting up the Lift Adapter Kit, including gloves and steel-toed work boots.


To set up your Lift Adapter Kit:

1. **Unpack.** The platform and the clamp assembly come in separate boxes. Open them in the area where you plan to assemble the unit.
2. **Attach the clamp assembly to the platform.** Use the provided nuts and bolts to attach the clamp assembly to the platform. Refer to the graphic in the **System Components** section to see where the clamp assembly attaches to the platform.

We recommend attaching the right side (the non-handle side) of the clamp assembly first.

3. **Attach the tie-downs.** If you plan on using the provided tie-downs to help secure your vehicle, attach them to the platform.
4. **Put the platform on your QuickJack frames.** If you are going to use your Lift Adapter Kit right away, move your QuickJack frames together and position the platform on top of the frames. Be sure the lock bars on the QuickJack frames are on the outside.

Important: Orient the platform so that the ramp is over the large square labels on the QuickJack frames. *The platform does not fit correctly if you put the clamp end over the labels.*

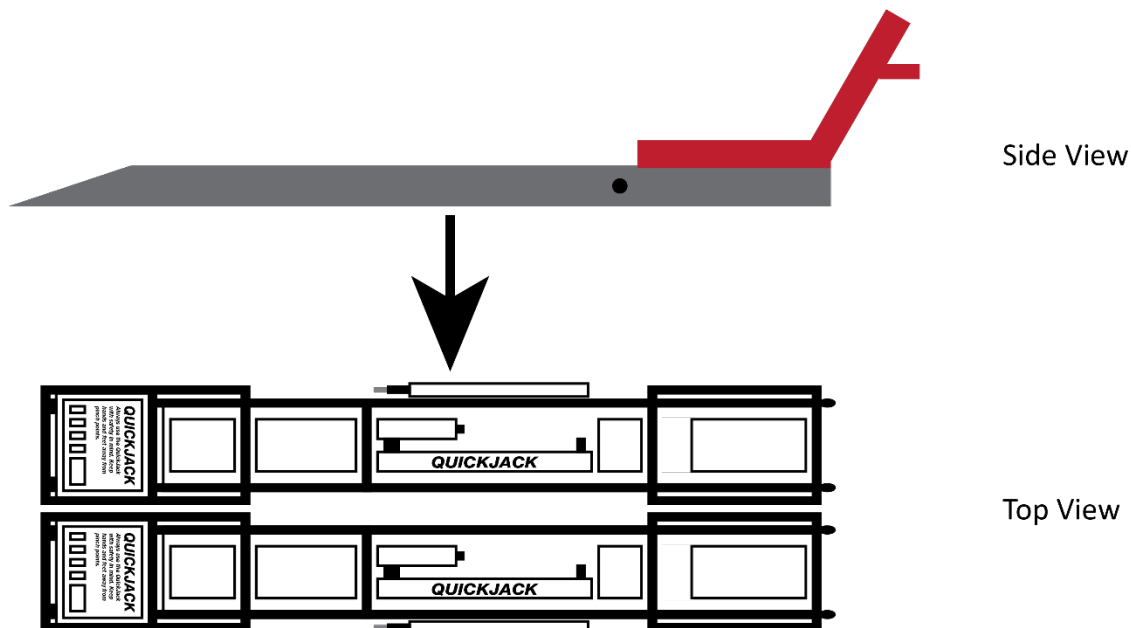

You can put the Lift Adapter Kit onto the QuickJack frames when the QuickJack frames are on the ground or in the first locked position. If you are having trouble putting on the platform with the QuickJack frames on the ground, try raising the frames to the first locked position. If you do put the platform on with the QuickJack frames in the first locked position, make sure to lower them before trying to put a vehicle on the platform.

 **WARNING** ***The platform must fit securely on the QuickJack frames.*** Do not use the Lift Adapter Kit until the platform fits securely on the QuickJack frames; if it does not, your load could become unstable and fall, potentially damaging your vehicle, the platform, or people in the area.


- **Connect the platform to the QuickJack frames.** Push the rod through the holes in the side of the platform and through the QuickJack frames. ***Secure the rod at both ends.***

Operation

To operate your Lift Adapter Kit:


1. **Make sure the QuickJack frames are on the ground.** If the QuickJack frames are raised, you must move them to the ground so that the platform's ramp is accessible.
2. **Move a vehicle onto the platform.** Make sure the vehicle is centered and balanced on the platform.
3. **Secure the vehicle using the clamp assembly.** Turn the handle on the clamp assembly until it is securely holding the vehicle. The clamp assembly is designed to securely hold your vehicle in place without causing any damage.
4. **Use the tie-down rings.** The provided tie-down rings can be used, if desired, to further secure the vehicle.
5. **Make a visual inspection.** Do not use the Lift Adapter Kit until you have made sure that all components are in place and working correctly.

If something is not working correctly, contact an authorized repair facility, your distributor, or QuickJack at support.quickjack.com or support@quickjack.com.

 **WARNING** Do not use the Lift Adapter Kit unless all components are in place and working normally. To do otherwise endangers your vehicle, the platform, and any people in the area.

6. **Raise the QuickJack frames to the desired position.** Make sure to secure the QuickJack in one of its two locking positions.
7. **Begin your service or repair.** Your Lift Adapter Kit is ready to go.

Maintenance

 **WARNING** Before performing any maintenance on your Lift Adapter Kit, make sure the QuickJack's power unit is disconnected from the power source and cannot be reconnected until the maintenance is complete.

To maintain your Lift Adapter Kit:

- **Cleanliness.** Always keep your Lift Adapter Kit clean. Make sure to wipe it down after each use; remove any grease, dirt, or other debris. You can use cleaning materials on the platform, but keep them away from the QuickJack frames.
- **Storage.** Store your Lift Adapter Kit in a cool, dry location when not in use.
- **Clamp assembly.** Be careful not to bump or bend the clamp assembly; if bent, it may not work correctly.



1645 Lemonwood Drive
Santa Paula, CA 93060 USA